ALCATEL

Temporis 23

User's Guide

INTRODUCTION

Your Telephone is designed to give you flexibility in use, and high quality performance. To get the most from your new telephone, we suggest that you take a few minutes right now to read through this instruction manual.
If you have any questions or problems, consult the Troubleshooting Tips for the solution.

PARTS CHECKLIST

Your package should contain the following items:

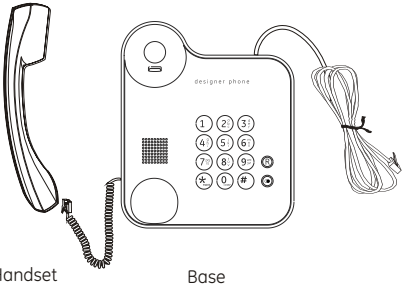

Handset Base

BEFORE YOU BEGIN

MODULAR JACK REQUIREMENTS

You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.



INSTALLING THE PHONE

Your telephone should be placed on a level surface such as a desk or table top, or you can mount it on a wall, A desktop/wall mounting pedestal is built into the base of the phone.

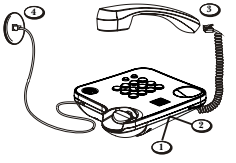

1. Slide the RINGER volume (on the base) to the desired volume.
2. Slide the PULSE/TONE switch to TONE if you use Touch-Tone Service; set it to PULSE if you have rotary service.
3. Plug the handset cord into the handset.
4. Plug the telephone line cord into a modular wall phone jack.

WALL MOUNT INSTALLATION

Your telephone may also be mounted on a wall plate (not included).

1. Plug the telephone line cord into a modular wall phone jack.
2. Slip the mounting holes on the base over the wall plate posts and firmly slide the unit down into place.

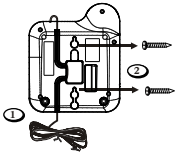

Model Temporis 23-SA
10000002 Rev.1 (E)
10-09
Printed in China

Product imported by :
Commsolve (Pty) Ltd
info@stingray.co.za
Tel : + 27 21 442 1540
Fax: + 27 21 448 8033

ATLINKS
ATLINKS
22 quai Gallieni
92150 Suresnes
France
www.atlinks.com

Alcatel logo and Alcatel name are trademarks of Alcatel and used under license by ATLINKS.

Wrapping the Telephone Line Cord

In desktop mode, you may want to wrap the excess telephone line cord through the grooves provided on the bottom of the base.

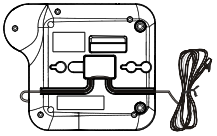

Telephone Basics

Receiving a Phone call

1. When the phone rings, simply lift the handset and begin your conversation.
2. To end of conversation, return the handset to cradle.

Ringer Volume

You may control the ringer volume level with theswitch located on the bottom of the base.

= ringer tone will be loud

= ringer tone will be middle

= ringer tone will be low.

Placing a Phone Call

1. Lift the handset and wait for a dial tone.
2. Dial the telephone number you wish to call.

Flash Button

Press the FLASH button instead of using the hook switch to activate customer calling services such as call waiting or call transfer, which are provided by your local phone company. Select the appropriate flash timing (on the bottom of the base, 600ms,300ms,100ms).

Redial Button

This unit redials up to 32 digits. To automatically redial the last number you called:

1. Pick up the handset to get a dial tone.
2. Press redial.

Temporary Tone Feature

If you have Pulse (rotary) service, and want to access customer calling services that require touch-tone dialing, such as getting information from a local bank, you can use this feature.

1. Press the TONE button (*) after you have connected to the service in order to enable touch-tone dialing.
2. When you hang up, the phone automatically returns to Pulse dialing mode.

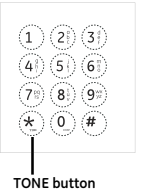

Troubleshooting Tips

Problem	Solution
No dial tone Won't dial out	• Check hook switch to make sure it pops up. • Make sure TONE/PULSE is set to correct position.
Phone doesn't ring	• You might have too many phones on one line.
Feedback when dialing in PULSE mode	• This is normal, Power fluctuates with phone outpulsing.
Can't be heard by other party	• Make sure phone cord is securely plugged in. • Make sure other phones aren't off the hook at the same time you're using the phone. It is normal for the volume to drop when additional phones are used at the same time.

Care and Maintenance

To keep your phone working and looking good, follow these guidelines:

- Avoid putting near heating appliances and devices that generate electrical noise (for example, motors and fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping and other rough treatment of the unit.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original package in case you need to ship it at a later date.

Used equipment must be disposed of in compliance with current environmental protection regulations. You should return it to your reseller or dispose of it in an approved recycling centre.